

RSQ CGK-90


QUICK REFERENCE GUIDE

CONNECTIONS



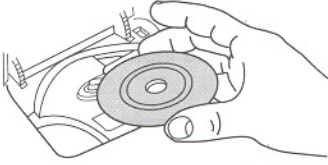

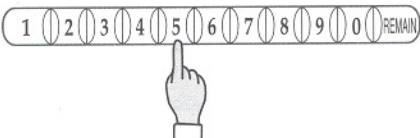
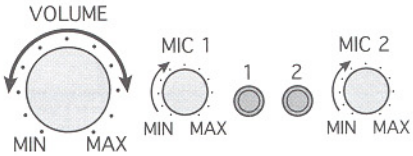

※ **WARNING** : This unit should be situated away from the TV in order to avoid discoloration of TV.

OPTIONAL CONNECTION WITH EXTERNAL AMPLIFIER

Please use optional audio cable. Connect with audio input from the amplifier or cassette deck. Output is stereo.

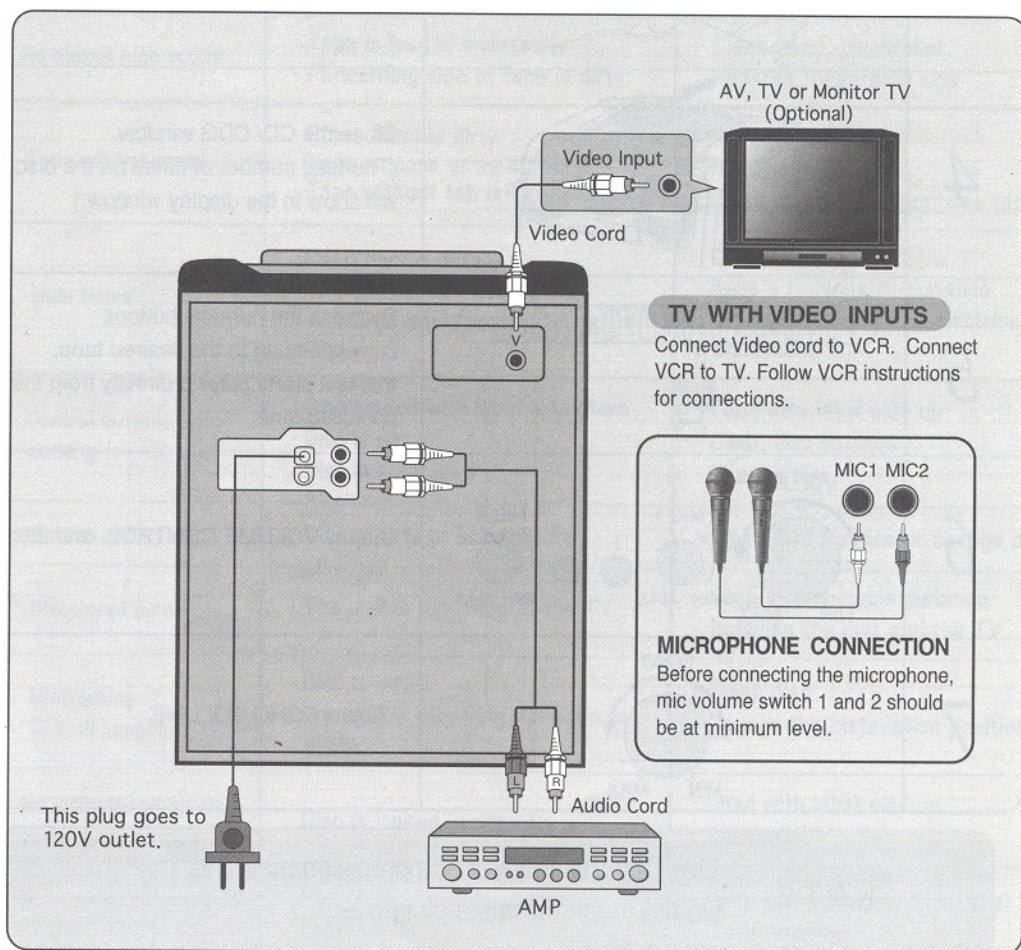

OPERATION

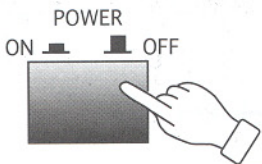1		<p>Press Power button. LCD display window shows 00 .</p>
2		<p>Press OPEN/ PUSH on the CD/ CDG window.</p>
3		<p>Place the CD/ CDG in the disc tray with label facing upward.</p>
4		<p>Close the CD/ CDG window. (The total number of tunes on the disc will show in the display window.)</p>
5		<p>By press the numeric buttons corresponding to the desired tune, this unit starts playing directly from the specified tune.</p>
6		<p>Adjust VOLUME CONTROL, and then Mic 1, Mic 2.</p>
7		<p>Adjust ECHO VOLUME.</p>

NOTE

This CD/ CDG player is a precision machine.
Do not touch turntable pickup lens.

HOW TO USE THE DIRECT ACCESS NUMERIC BUTTONS

PROBLEM	PROBABLE CAUSE	REMEDY
No power when power is pressed	<ul style="list-style-type: none"> Power plug not inserted securely 	<ul style="list-style-type: none"> Plug in securely
No audio output but the display indicates the number of the song	<ul style="list-style-type: none"> Control, or button not pressed 	<ul style="list-style-type: none"> Press button
No playback when tape is loaded	<ul style="list-style-type: none"> Tape loaded incorrectly Tape is already wound Pause button is pressed 	<ul style="list-style-type: none"> Load tape again Rewind tape Press pause button again
Impossible to record tape	<ul style="list-style-type: none"> Tape with broken tab is loaded Record, playback head is dirty 	<ul style="list-style-type: none"> Change the tape Clean the head
Sound jumping	<ul style="list-style-type: none"> Tape is dirty 	<ul style="list-style-type: none"> Change the tape
No output high sound	<ul style="list-style-type: none"> Tape is loaded incorrectly Forwarding side of tape is dirty 	<ul style="list-style-type: none"> Clean head, pinchroller, capstan forwarding side
Tape will not erase	<ul style="list-style-type: none"> Erase head is dirty Tape is loose or scratched Tape without tab is used 	<ul style="list-style-type: none"> Clean erase head Replace tape Close up hole w/cellophane tape
Hum Noise	<ul style="list-style-type: none"> Head part is dirty The unit is too close to the electrical equipment 	<ul style="list-style-type: none"> Clean head part Keep a reasonable distance between the unit and electrical equipment
Control buttons not working	<ul style="list-style-type: none"> Disc loaded with label side down Disc is dirty Disc is scratched 	<ul style="list-style-type: none"> Load with label side up Clean disc surface Change disc
Screen distortion	<ul style="list-style-type: none"> Disc is dirty or scratched 	<ul style="list-style-type: none"> Clean disc surface or change disc
Discolored screen	<ul style="list-style-type: none"> The unit is too close to the TV 	<ul style="list-style-type: none"> Keep a reasonable distance between the unit and the TV
Mistracking (Sound jumping)	<ul style="list-style-type: none"> Disc is dirty The unit is receiving vibration or shock 	<ul style="list-style-type: none"> Clean disc Change the installation position
No indicator when disc is loaded	<ul style="list-style-type: none"> Disc is loaded incorrectly 	<ul style="list-style-type: none"> Load with label side up Check disc
No screen, but audio is output	<ul style="list-style-type: none"> Non graphic disc is loaded Disc is dirty 	<ul style="list-style-type: none"> Load Disc with graphics(CDG) Clean the disc

RSQ AUDIO, INC.

HOW TO USE THE DIRECT ACCESS NUMERIC BUTTONS

■ DIRECT ACCESS PLAY

By pressing the numeric buttons corresponding to the desired song, the unit starts playing directly from the specified song. (Example) To play the 3rd song, press the **3** button. To play the 12th song, press the **1** button, then press the **2** button.

SPECIAL FEATURES

■ To enjoy KARAOKE:




This control should be set at "Karaoke". Use multichannel sound CD/CDG or tape.

■ To enjoy MUSIC, or practice by listening to a song:

This control should be set at "MUSIC". Use standard listening music tape or music CD/CDG. When using multichannel sound CD/CDG or tape, both vocal/singer and music will be played at the same time.

■ To use multichannel sound (VOCAL CHANGER)

This control should be set at "Vocal Changer". This function is useful when singing a duet song or practicing a song from a multichannel sound CD/CDG or tape.

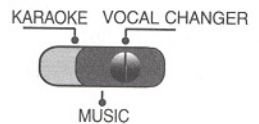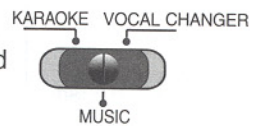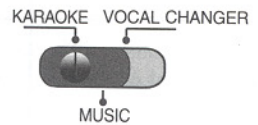

HOWLING (FEEDBACK)

When the microphone is too close to the speaker, howling occurs. When Echo is on, it is easier for howling to occur.

