




KD BANNERPOLES

# SET-UP INSTRUCTIONS FOR KD Majestic series & Party Shade

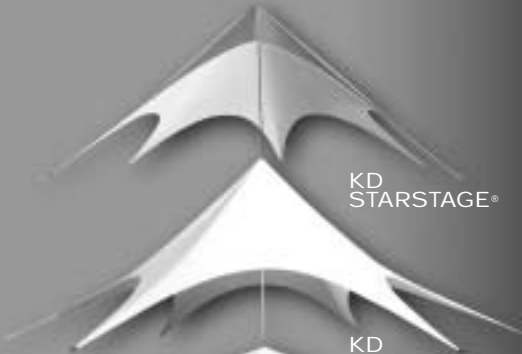

KD STARSTAGE®



KD STARSHADE®



KD HEXAGON® 280



KD HEXAGON® 81



KD MAJESTIC® 200



KD MAJESTIC® 150



PARTYSHADE




KD MAJESTIC® 100



KD MAJESTIC® 25



1.

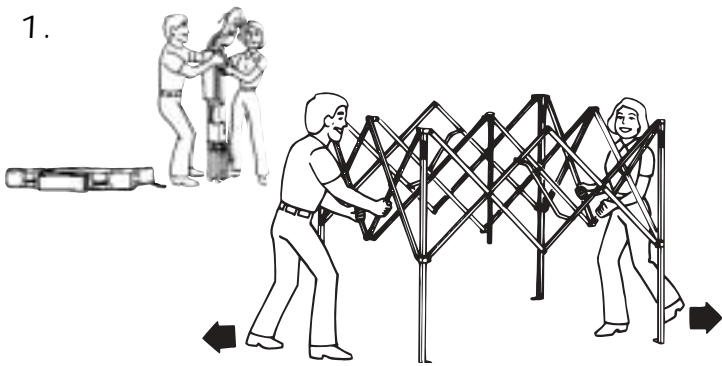


After taking everything out of the carry bag, center one person on each side, in line with center scissors beam. Grasp the lower "V" at the center. Both will lift and pull out, stepping away from each other.

2.




Pull frame out half way. Place fabric top on framework.

3.

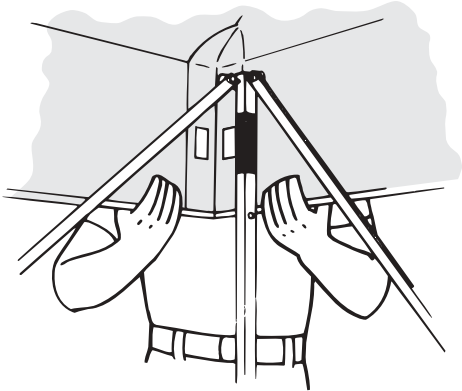


Attach to each velcro corner.

4.

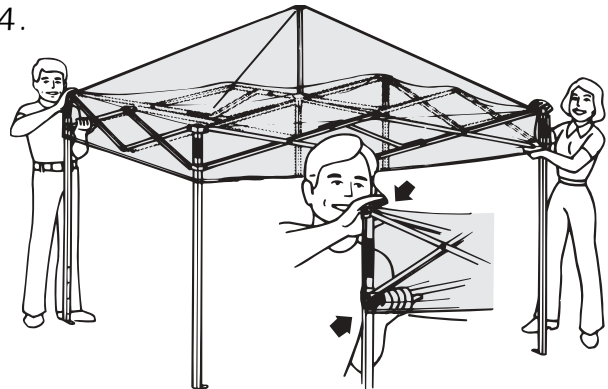


Pull frame completely out. Push the leg socket over the button, so that it is resting on top of the button. Do this to each leg in the up, or extended position.

5.

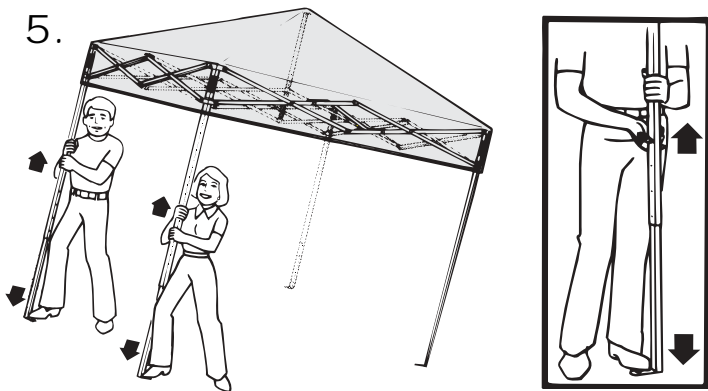

Lift each leg and slide lower leg extension out until the latching button snaps into the first adjustment hole. The KD Kanopy will be set at the lowest upright position.


6.

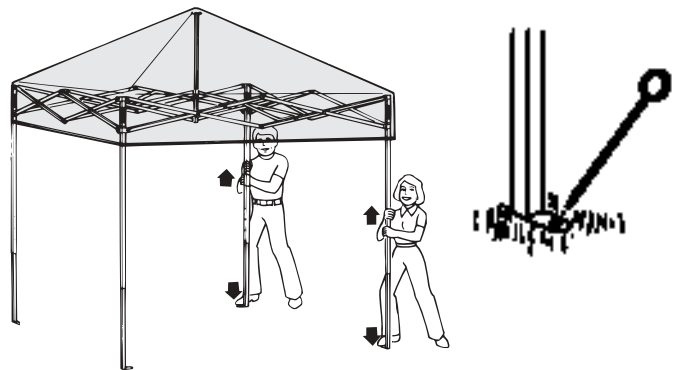

For height or leveling adjustment, depress leg latching buttons and slide the lower leg extensions, as required, to latch at any of the four adjustment holes. Last, put the four ground spikes through each hole in the bottom of the legs

## TAKE - DOWN

Fully retract all lower leg extensions. Depress latching buttons at sliding leg sockets and move sockets below the latching button. Push frame together half way. Two persons centered on opposite side, inline with center scissors beam, will grasp the upper inverted "V" at the center. Both will lift and push in, walking toward each other.

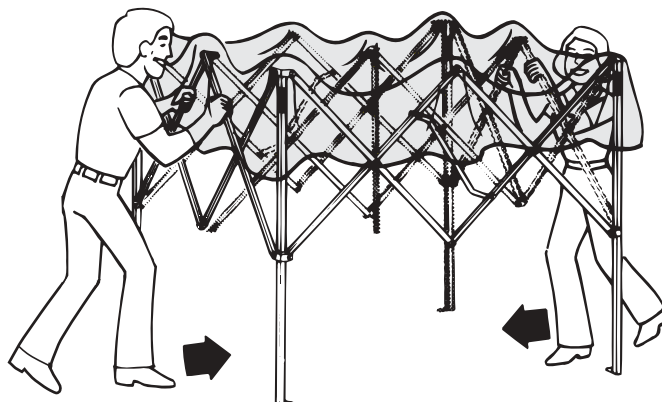

## TOP FOLDING INSTRUCTIONS

### CAUTION:

Please use care when folding combination light and dark colored tops. Fabric Dyes have a tendency to migrate from dark shades to lighter shades if the coated sides are in contact when folded and stored.


**1.** Fold all four corners together and lay flat. This is the most important step in correctly folding Color Combination tops. Keeping the coated sides of the same color together to prevent color transfer.

**2.** Take the four corners and fold them to the opposite side.

**3.** Fold the tip + of the top down to the bottom edge.


**4.** Fold in half lengthwise bringing the top to the bottom edge.

**5.** Fold into thirds and place in top bag.

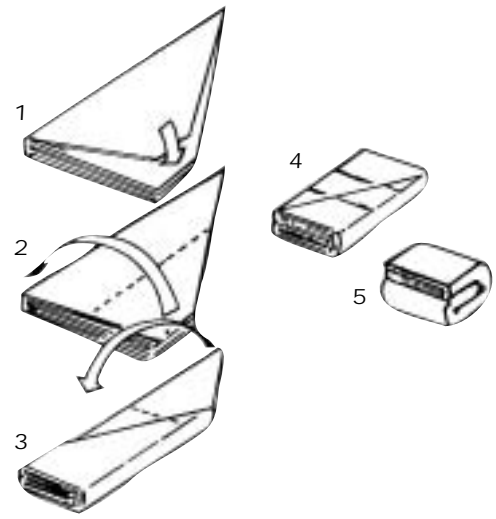

## USING THE KD CARRY BAG

1.

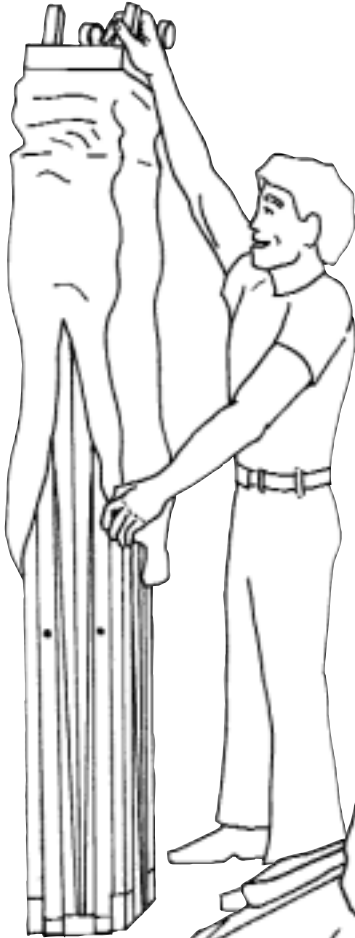

Stand the canopy frame upright and open carry bag to full length, by unfastening the hook & loop closures. 1) Slip the bag over the top end of the canopy frame. Pull the carry bag until it completely covers the canopy frame. Place the canopy top in the attached bag. 2) Use proper lifting technique to turn the canopy frame rightside up. 3) Fasten the hook & loop closures and wheel your KD unit away with ease!

**Wheel bag is shown below. Please follow these same instructions for non-wheel bags.**

2.



3.



# SET-UP/PARTS FOR MAJESTIC SERIES TENTS

NOTE: Part "O" is Not Shown - For part list diagrams of each canopy - visit our web site at [www.kdcanopy.com](http://www.kdcanopy.com)

## PARTYSHADE

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin W/Foot Pad	PSSL6
B	Upper Leg with Socket	PSLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	PSLCP
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	PSUPC
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar	PSSL5

## 5X5 TENT

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin	MLL6
B	Upper Leg with Socket	MLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	MPCA1
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	MPCA2
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar 28 3/4"	MSS5

## 8X8 TENT

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin	MLL6
B	Upper Leg with Socket	MLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	MPCA1
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	MPCA3
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar 44 1/4"	MSS5

## 10X10 TENT

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin	MLL6
B	Upper Leg with Socket	MLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	MPCA1
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	MPCA2
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar 57 1/2"	MSL5

## 10X15 TENT

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin	MLL6
B	Upper Leg with Socket	MLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	MPCA1
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	MPCA2
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar 57 1/2"	MSL5

## 10X20 TENT

LOCATION	DESCRIPTION	PART
A	Lower Leg With Push Pin	MLL6
B	Upper Leg with Socket	MLU6
C	Push Pin	MPP1
D	Center Scissor Nut & Bolt Assembly	HW23
E	Intermidate Scissor Block	MISB
F	Leg Socket	MLSC
G	Corner Leg Cap	MLCC
H	End Scissor Bar Bolt	HW24
I	Intermediate Scissor Block	MISB
J	Lower Center Block	MLCB
K	Lower Center Pole without Socket	MPCA1
L	Upper Center Block	MUCB
M	Upper Center Pole with Cap	MPCA2
N	Center Dome Cap	MDC
O	Center Pole Spring	MCPS
P	Scissor Bar 57 1/2"	MSL5
Q	Intermediate Leg Cap	MILC20
R	Intermediate Leg Socket	MILS20
S	Center Block	MCB20



3755 West 69th Place • Westminster, CO 80030  
303.650.1310 • Fax: 303.650.5093

CALL TO ORDER **1-800-432-4435** or visit [www.kdcanopy.com](http://www.kdcanopy.com)

If you have any difficulty at all please contact us.