


SNOKONE MACHINE

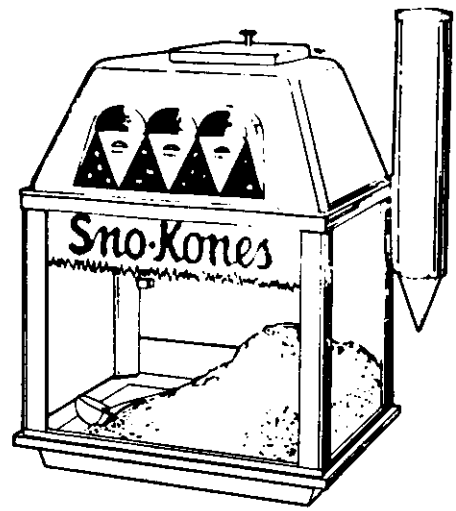

The Sno-kone Machine is a great attraction for Birthday Parties, School Functions, etc. It is a very simple machine to operate, but in order to get the best results, please read the following **BEFORE** you attempt to operate the machine.

IMPORTANT INFORMATION

The Sno-kone Machine consists of the motor, shaving unit, and dispensing case. The motor has a toggle switch mounted on it. There is a separate switch on the light inside the case.

On the end of the motor shaft is mounted the cutterhead which is inside of the shaver body (gooseneck). Going down into the shaver body is the pusher handle which presses the ice against the revolving cutterhead which shaves the ice.
CAUTION: Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110 volt, single phase, 60 cycle, AC current.

TO OPERATE MACHINE

1. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" to 4" in size. Fill to about an inch or so from the top, the larger the piece of ice the better the snow.
2. Push the pusher handle down to press the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and you get a better bite.
3. **DO NOT FORCE THE HANDLE** too much as motor could be stalled.
4. When too much pressure is necessary, relieve the handle, and then come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

In normal operations the motor gets warm—a surface temperature of 150° is normal.

CAUTION

Do not let any metal get down in the gooseneck, or you will ruin the blades.

Never put your fingers or any object into the shaver body while the motor is running. Disregard for these instructions and careless handling will result in accidents and/or injury. If problems not covered occur, contact your professional party rental center immediately.

CLEANING

Always unplug the machine before cleaning. Wipe all surfaces clean before returning to the rental center and **AVOID ADDITIONAL CLEANING CHARGES.**

REMEMBER, you are renting this equipment. Be sure your rental center explains the terms of your rental contract so that you are familiar with any damage or additional cleaning charges.

*Complete your party by renting: Tables, chairs, silver service, china, linen, etc.
Also Purchase: Paper and/or plastic party accessories*

*Compliments of your
A.R.A. Member Rental Center*



MILLER'S RENTALS & SALES, INC.


764 U.S. Highway 1
EDISON, NEW JERSEY 08817
(908) 247-8888

SNOKONE MACHINES

The SnoKone machine is simple to operate and a great attraction for any event!

The Machine

The machine includes a 110 volt, single phase, 60 cycle, AC current motor with toggle switch, shaving unit, dispensing case, and separate light switch inside the case. A cutterhead is mounted on the end of the motor shaft inside the shaver body (gooseneck). The pusher handle presses the ice against the revolving cutterhead to produce the shaved ice.

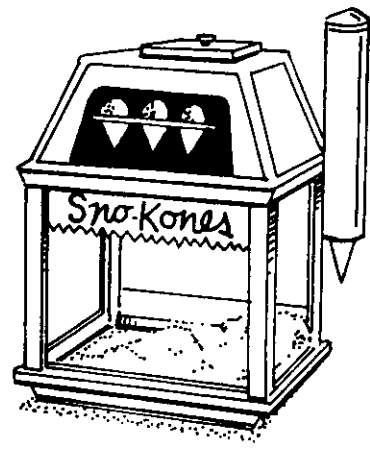

NOTE: The machine must be properly grounded to prevent electrical shock.

Tips

1. Start the motor and fill gooseneck an inch from the top with ice cubes or 3" x 4" pieces of ice. (The larger the ice pieces, the better the snow.)
2. Push ice down against the cutterhead with firm pressure for best snow (too much = coarse ice; too little = mushy).
3. DO NOT force the handle.
4. A surface temperature of 150° F. is normal.
5. Put only ice in the gooseneck to prevent damage to the blades.
6. Keep fingers away from shaver body when motor is running to prevent injury.

Cleaning Instructions

1. Unplug the machine.
2. Wipe all surfaces clean to avoid cleaning charges.

Consult your rental center for additional equipment and accessories for your event.



Miller Rentals & Sales, Inc.
764 US Hwy. #1
Edison, N.J. 08817
(908) 985-3050
Fax: (908) 494-0344

UNDERSTAND YOUR RENTAL CONTRACT KNOW YOUR RESPONSIBILITY FOR THE EQUIPMENT YOU HAVE RENTED

These guidelines and tips are common-sense suggestions designed to promote Snokone machine efficiency and safety. Compiled from literature of leading experts in the field, they are believed to be reliable, and are offered as suggestions and illustrations to deal principally with common practices and conditions encountered in the use of Snokone machines. The guidelines are not intended to be all-inclusive, complete descriptions of safe practices, or to supplant or replace other additional precautionary measures to cover usual or unusual conditions or situations where common sense might otherwise dictate. Accordingly, the American Rental Association and its member firms disclaim all liability for, and make no warranty or guarantee of, the accuracy or applicability of this information in any situation.



american rental association